

# Pattern of the Month


## “CACTUS FLOWER POT”

Lisa Vogt  
Originals in Glass  
Tampa, FL



**Spectrum  
Glass**

### FUSING PATTERN

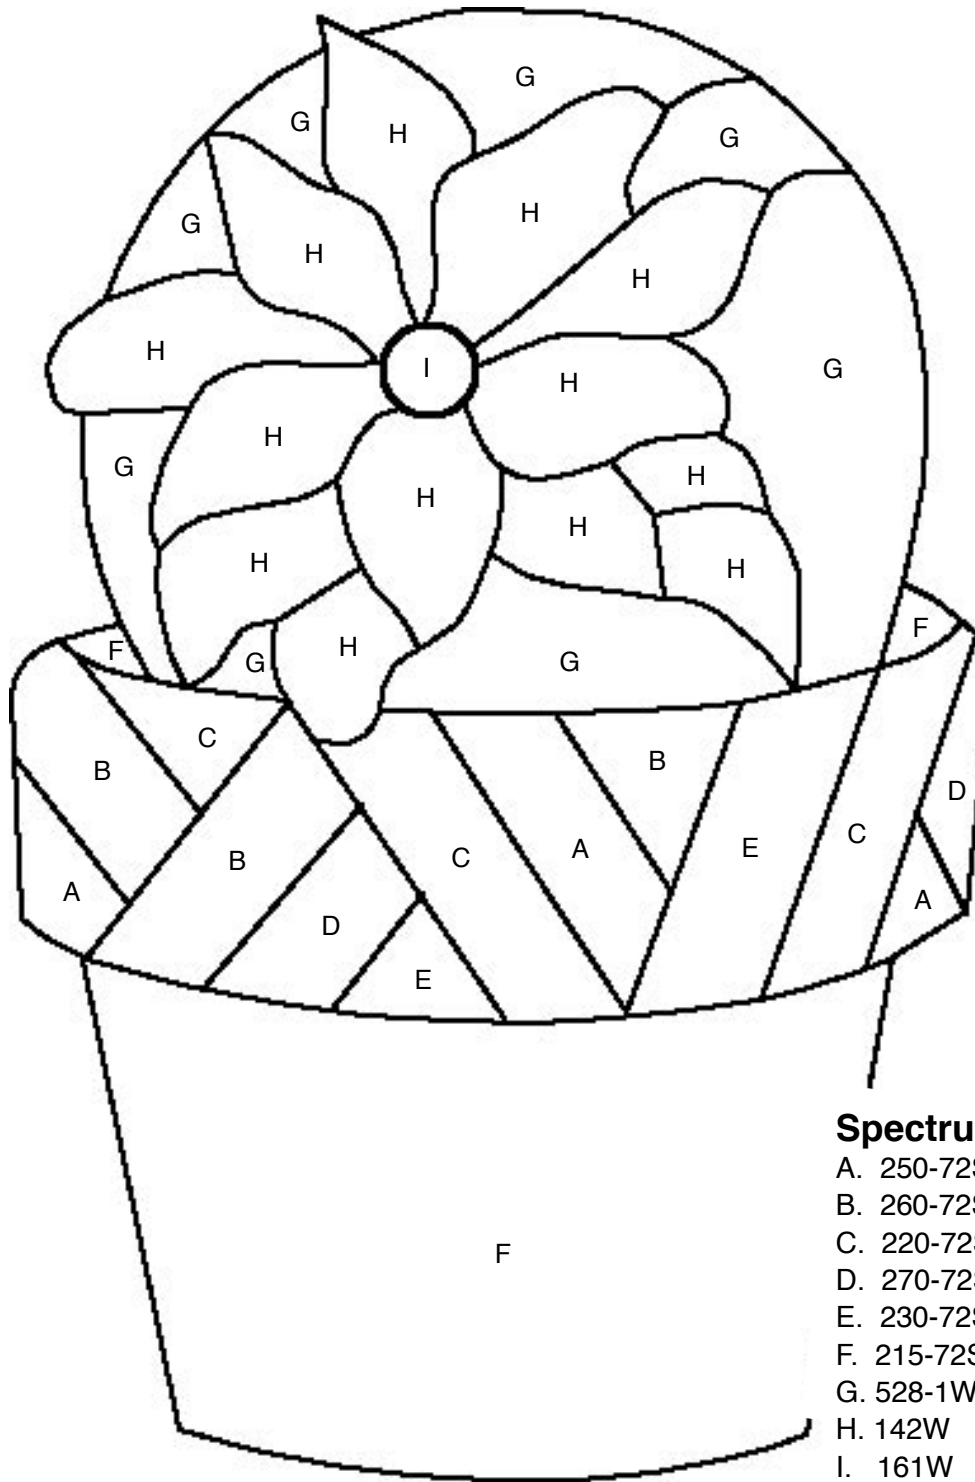

#### 1. Fuse the decorative rim of pot:

Layer 1: Cut 100SFS (Clear) base in the shape of the perimeter of the rim.

Layer 2: Cut pattern pieces as shown. Stack second layer on top of clear base.

Fuse pot rim according to your established kiln procedures or refer to System 96® Firing Guidelines.\*

#### 2. Assemble project using copper foil.

Note: Rim may be completed using copper foil instead of fusing if desired.

### Spectrum Glass Color Suggestions

- A. 250-72SF Opalized Red
- B. 260-72SF Opalized Yellow
- C. 220-72SF Opalized Dark Green
- D. 270-72SF Opalized Orange
- E. 230-72SF Opalized Cobalt
- F. 215-72S Opalized Adobe
- G. 528-1W Sea Green Waterglass®
- H. 142W Light Purple Waterglass®
- I. 161W Yellow Waterglass®